



Warning - This watch contains a button or coin cell battery. Hazardous if swallowed.

The battery is hazardous and is to be kept away from children (whether the battery is new or used).

The battery can cause serious injuries if swallowed or placed inside any part of the body.

Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.

Owlconic Teaching Watch Time Setting Instructions



Remove plastic battery saver peg from behind watch crown.



Plastic battery saver peg removed



Make sure the watch crown is pulled out away from the watch case.

Rotate the crown until the correct time is set on the watch then push the crown back in towards the watch case.



With the crown now pushed all the way in the watch should be working, you should see the second hand moving around the watch face.

Care Instructions

Use only a clean dry cloth to wipe over the watch if necessary.

Your watch is Water Resistant ONLY it's not Waterproof.

It IS Resistant to rain and water splashes.

It IS NOT suitable for swimming, showering or immersion in water.

A Jeweler or Watch Repairer must be used when replacing a battery.

Remember to register your warranty at www.owlconic.com